

Pack 3

LaFerrari

1:8 SCALE

THE ULTIMATE HYPERCAR
ULTIMATE PERFORMANCE
ULTIMATE STYLE

AGORA
MODELS®



STAGE 17 THE FRONT RIGHT TYRE

SUPERLATIVE GRIP ON CORNERS,
CRISP STEERING AND GREAT
TRACTION: THESE ARE THE MAIN
QUALITIES OF THE PIRELLI P ZERO
TYRES, CHOSEN TO TRANSMIT
THE LAFERRARI'S POWER
TO THE TARMAC


PARTS LIST

NO.	NAME	QUANTITY	MATERIAL
1	Front right tyre	1	Rubber




STEP 1

Install the driver and passenger mats as shown. The pins and holes for each mat are differently positioned and sized to ensure fitment is correct.

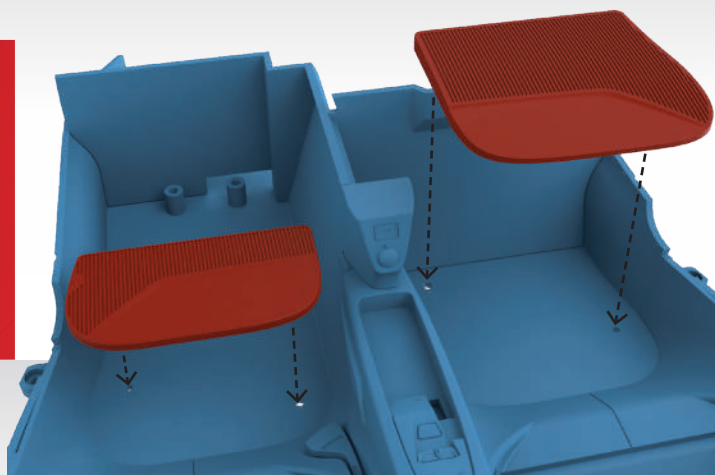


STEP 2

Place the partition in front of the central tunnel pushbutton unit. The two holes and matching pins ensure a firm fit.

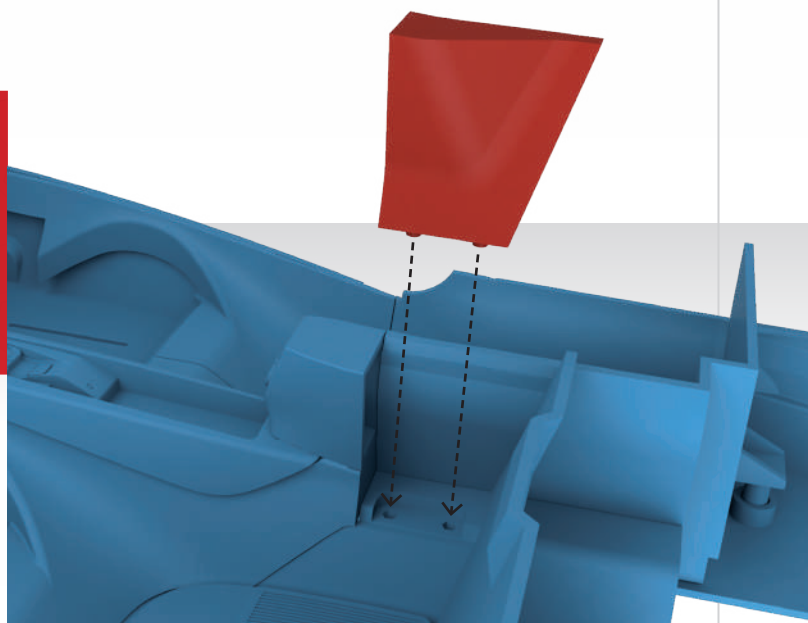

STEP 3

Carefully press both seat belt attachments and the gearbox management control panel into their correct locations as indicated.

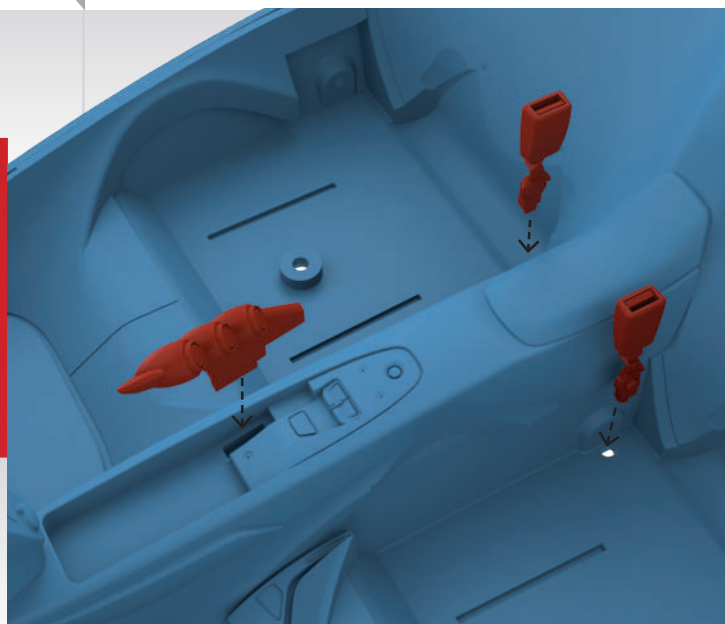

STAGE COMPLETE

The passenger compartment of your 1:8 scale replica of the LaFerrari has had new details installed which highlight its elegance and functionality. Carefully store the bottom section of the passenger compartment and all the components you have fitted away.



STAGE 18 THE FRONT RIGHT WHEEL RIM

USING THE FRONT RIGHT WHEEL
RIM AND ITS HUB CAP, YOU
CAN NOW START ASSEMBLING
THE THIRD WHEEL OF YOUR
1:8 SCALE LAFERRARI



PARTS LIST

NO.	NAME	QUANTITY	MATERIAL
1	Front hub cap	1	ABS
2	Front right wheel rim	1	Metal




STEP 1

Take the tyre provided with stage 17. Test-fit the tyre onto the rim over the filler insert. If this is difficult, remove the insert and place the tyre in hot water for about a minute to soften it.

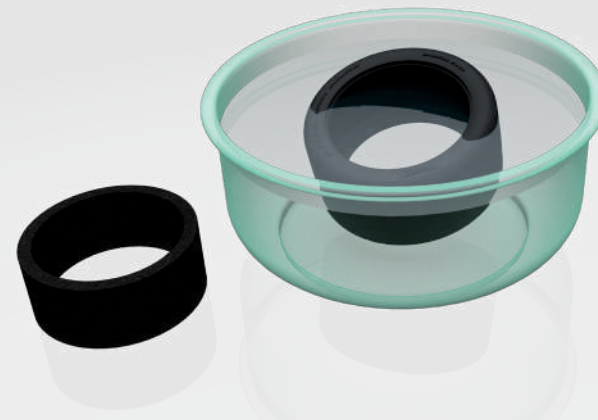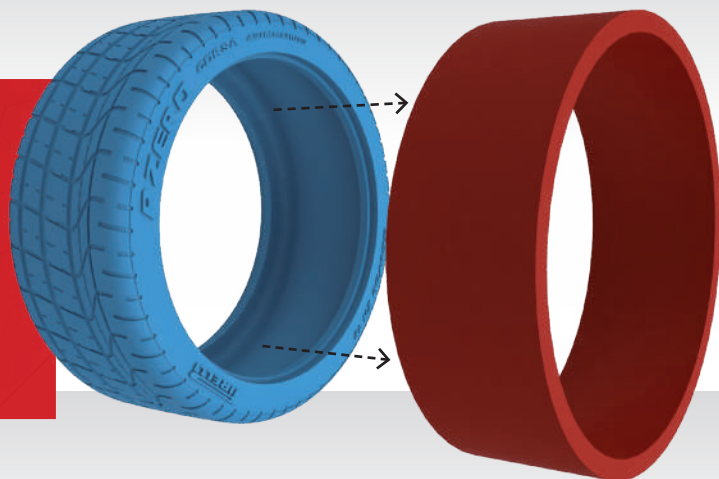

STEP 2

If the tyre needed softening, dry it carefully before replacing the filler insert inside it. Make sure that the insert is evenly stretched around the entire circumference of the tyre.

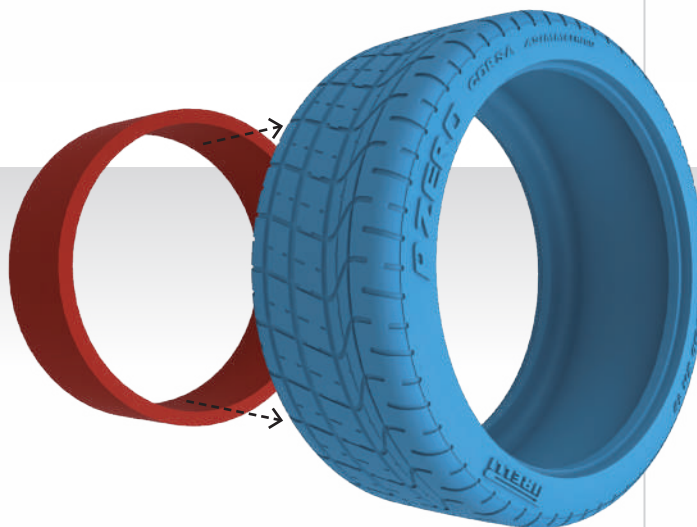

STEP 3

Fit the tyre onto the front right rim. Check that the tyre beads are properly bedded into the corresponding channels of the rim. Note the position of the S-shaped tread on the wheel (red arrow).



STAGE COMPLETE

Put the wheel away safely together with the others you have built so far. Keep the Prancing Horse hub cap in a safe place too. You will use these components at a later stage.



SCREWS TABLE

CODE	SIZE	TYPE	COLOUR	MATERIAL
A	M2.3x6	round head	black	metal
B	M2.6x6	round head	black	plastic
C	M2x5	flange head	black	metal
D	M2x5	countersunk head	black	metal
E	M2.3x6	round head	black	plastic
F	M2x5	countersunk head	black	plastic
G	M2.6x6	round head	silver	metal
H	M2x6	round head	black	metal
I	M2.6x6	round head	silver	plastic
J	M2.3x5	round head	black	plastic
K	M2x4	round head	black	plastic
L	M2x5	flange head	black	plastic
M	M2x4	round head	black	metal
N	M2.3x5	flange head	black	metal
O	M2x8	round head	black	metal
P	M2x6	round head	black	plastic
Q	M2.6x5	round head	black	plastic
R	M2.3x6	round head	silver	plastic
S	M2x10	round head	black	metal
T	M2x18	round head	black	metal
U	M2x8	round head	black	metal
V	M2x12	round head	black	metal
W	M2x5	round head	black	metal
X	M2x4	flange head	black	metal
Y	M2.3x5	countersunk head	black	plastic
Z	M2.3x5	countersunk head	black	metal
AA	M2.3x4	round head	black	metal
BB	M2x10	round head	silver	metal
CC	M2.3x8	flange head	black	metal
DD	M2x5	round head	black	metal
EE	M2.3x7	round head	black	metal
FF	M2.6x6	round head	black	metal
GG	M2.6x6	flange head	black	plastic

STAGE 19 THE PEDALS

WITH THEIR NON-SLIP SURFACES,
THE PEDALS OF YOUR LAFERRARI
ENSURE MAXIMUM DRIVING
PRECISION AND CONTROL,
ESSENTIAL QUALITIES FOR
A HIGH PERFORMANCE CAR.




PARTS LIST

NR.	NAME	QUANTITY	MATERIAL
1	Pedals	1	Composite
2	Screws type B	2	Metal




STEP 1

Before placing the pedals (1) in position, you will need to thread the cables from the brake and accelerator pedals through the cable opening in the passenger compartment.

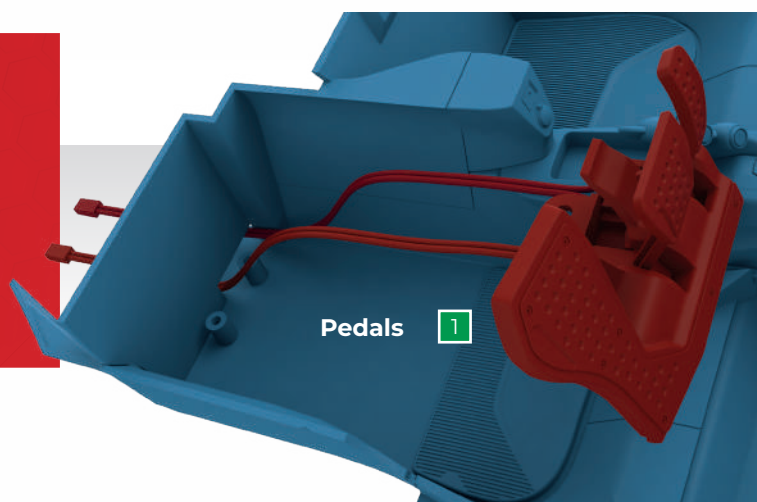

STEP 2

Fit the pedals (1) in place. Double check that the electrical wires are not trapped under the assembly, then drive the type B screws (2) through the holes to secure the pedals to the compartment.

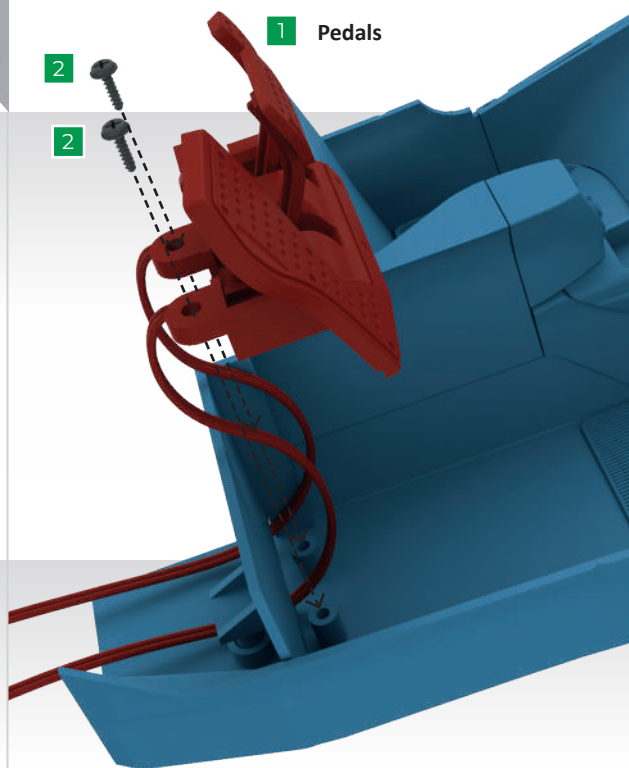

STAGE COMPLETE

The passenger compartment of your LaFerrari is now fitted with the driver's pedal assembly. Keep the passenger compartment in a safe place until it's needed again later.



STAGE 20

THE COOLING SYSTEM

THE COOLING SYSTEM OF LAFERRARI HAS BEEN DESIGNED TO KEEP ITS POWER UNIT AT THE CORRECT OPERATING TEMPERATURE UNDER EVERY CONDITION, WITH THE MINIMUM POSSIBLE DRAG.

PARTS LIST

NO.	NAME	QUANTITY	MATERIAL
1	Upper electric fan cowl	1	ABS
2	Cooling system base	1	ABS
3	Left fan (top section)	1	ABS
4	Left fan (bottom section)	1	ABS
5	Right fan with speaker	1	Composite
6	Screws type E	6	Metal





1




2



3



4

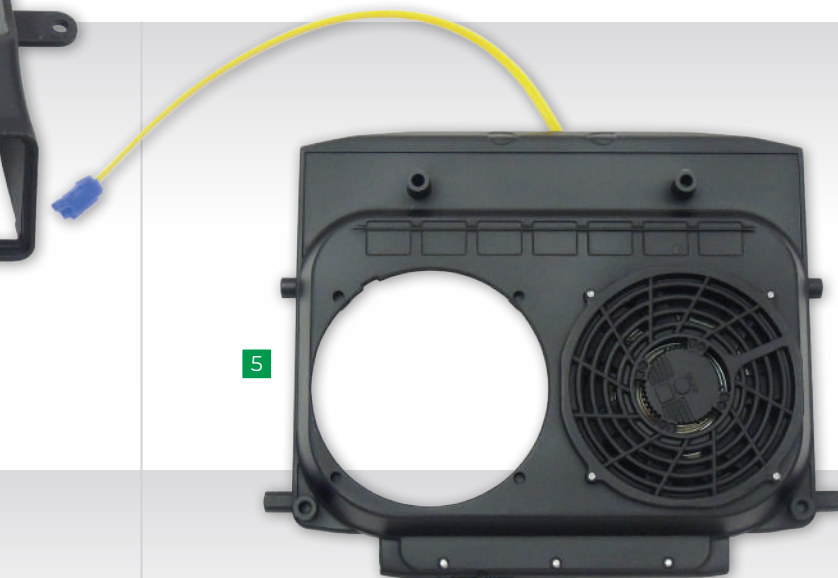

5




6

STEP 1

Insert the top section of the left fan (3) next to the right fan (5) as shown in the image.

Left fan
(top section)

3

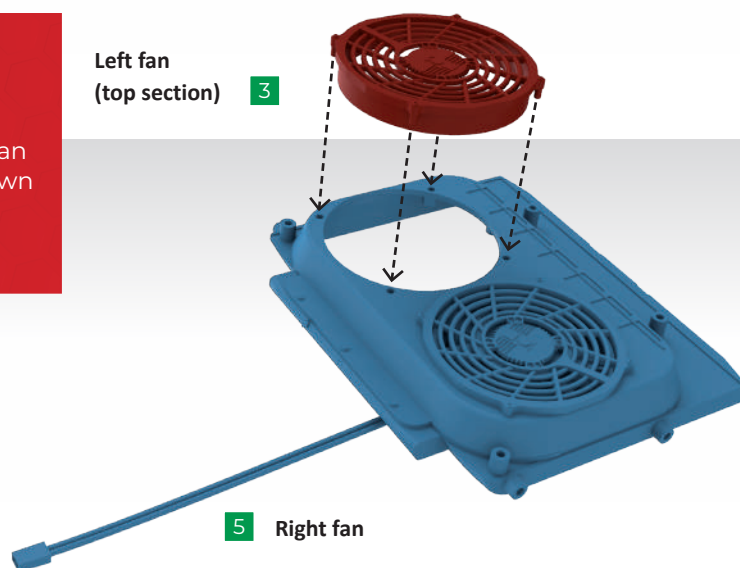


5

Right fan




STEP 2

Position the lower fan section correctly, then secure it with two type E screws (6).

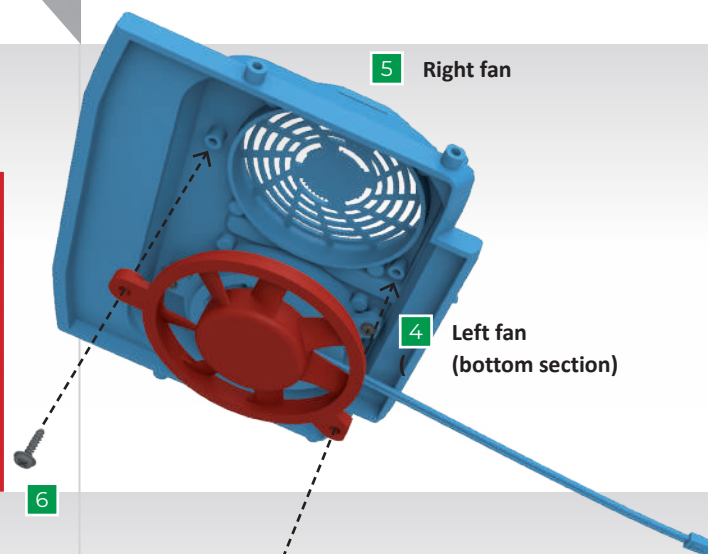

STEP 3

Place the upper electric fan cowl(1) onto the cooling system assembly. Insert four type E screws (6) and tighten them, ensuring that the screw remains aligned with its hole while tightening.

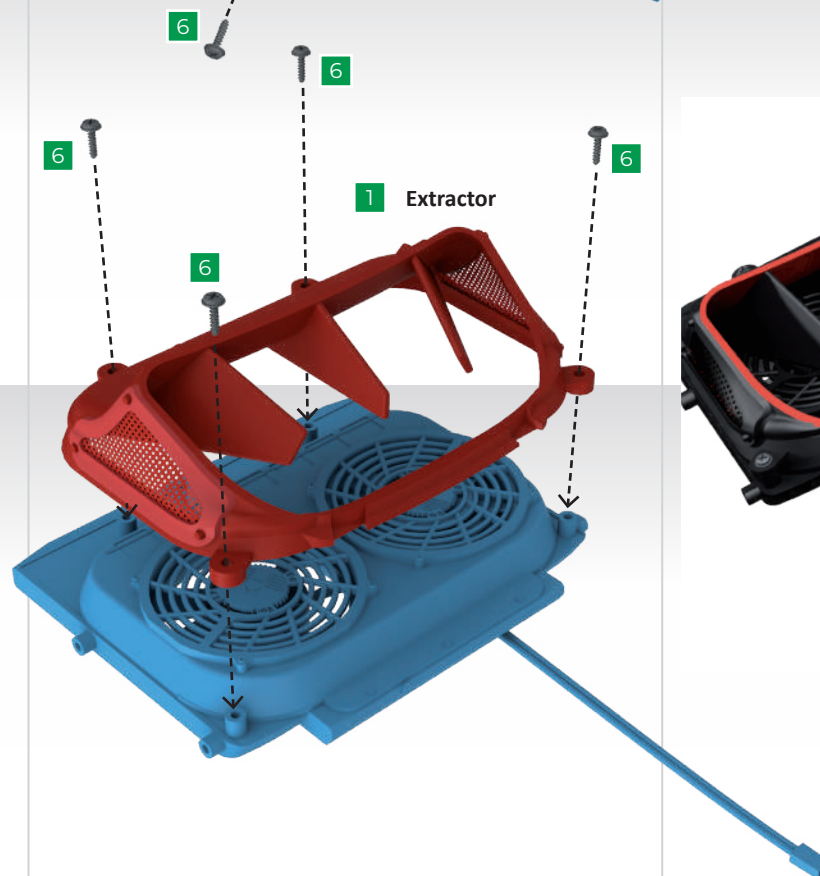

STAGE COMPLETE

Now you have finished building the cooling system of your 1:8 scale LaFerrari. Store the assembly away in a safe place until it is needed for fitting into the model later.



STAGE 21

LUGGAGE COMPARTMENT

LAFERRARI'S CUTTING-EDGE DESIGN MEANS ALL THE SPACE IS CAREFULLY MANAGED DOWN TO THE SMALLEST DETAIL. THERE'S EVEN ROOM FOR A SMALL LUGGAGE COMPARTMENT LOCATED UNDER THE BONNET.

PARTS LIST


NO.	NAME	QUANTITY	MATERIAL
1	Luggage compartment lid	1	ABS
2	Luggage compartment (bottom section)	1	ABS
3	Screws type F	2	Metal





STEP 1

Align the bottom section of the luggage compartment (2) with its lid (1). Insert two type F screws (3) into the hinge housings and fully tighten them.

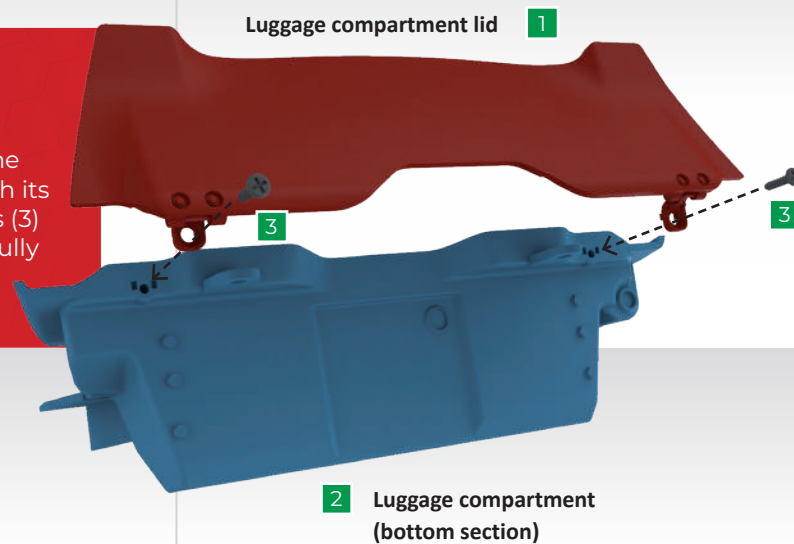

STAGE COMPLETE

This last photo shows the luggage compartment fully assembled. Keep it in a safe place as you will need to fit it onto your model.





STAGE 22

THE REAR RIGHT WHEEL RIM

WHEN THE RIGHT REAR WHEEL IS COMPLETE, YOU'VE FINISHED BUILDING THE WHEELS OF YOUR LAFERRARI. THERE IS NO ASSEMBLY IN THIS STAGE, MOVE STRAIGHT ON THE STAGE 23

PARTS LIST

NO.	NAME	QUANTITY	MATERIAL
1	Rear hub cap	1	ABS
2	Rear right wheel rim	1	Metal

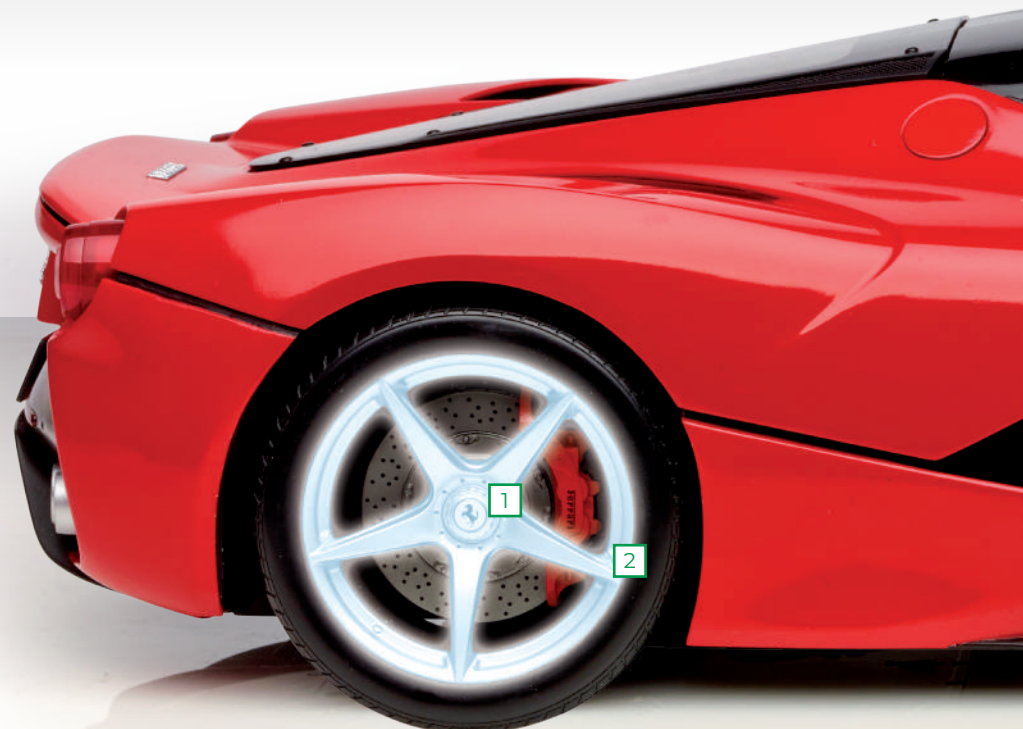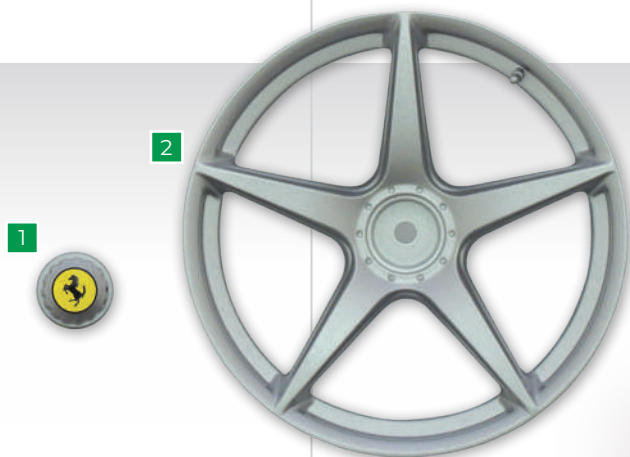


STAGE 23

THE RIGHT REAR TYRE

TYRES ARE THE ONLY PART OF A VEHICLE THAT COME INTO CONTACT WITH THE ROAD SURFACE. THEIR STRUCTURE AND COMPOSITION HAVE A SIGNIFICANT EFFECT ON THE VEHICLE'S PERFORMANCE

PARTS LIST

NO.	NAME	QUANTITY	MATERIAL
1	Right rear tyre	1	Rubber

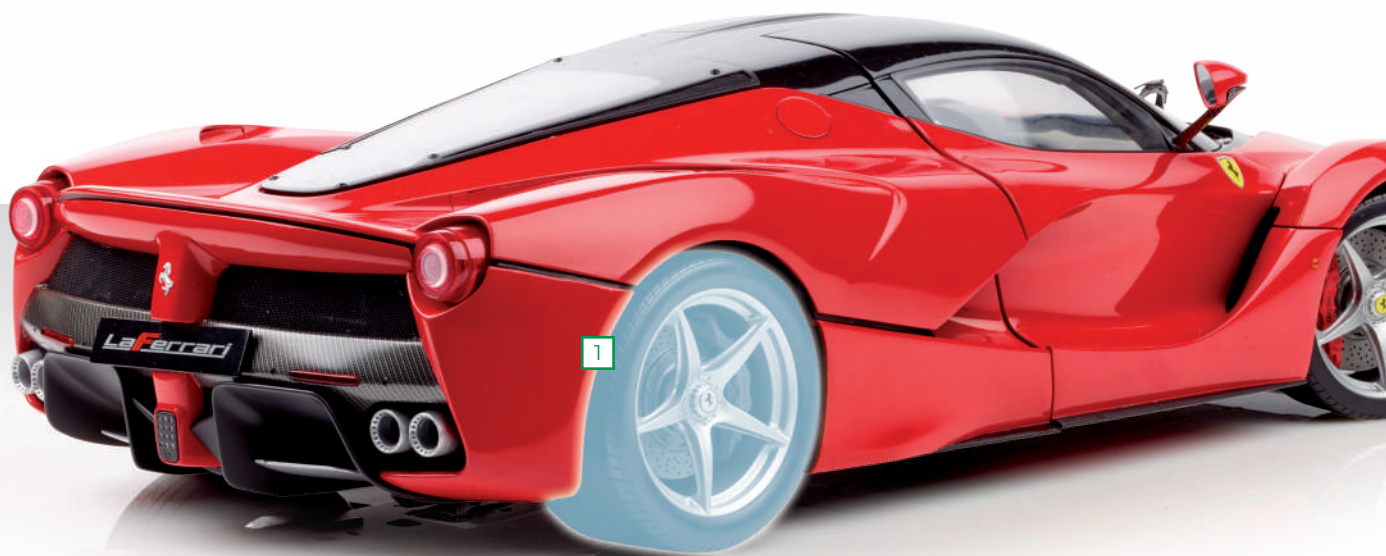

STEP 1

Take the rim provided with stage 22. Test-fit the tyre with its insert onto the rim. If this is difficult, remove the insert and place the tyre in hot water for about one minute.



STEP 2

Dry the tyre if necessary. Carefully replace the filler insert inside the tyre. Ensure that the filler insert is evenly stretched in its seat inside the tyre.



STEP 3

Fit the tyre onto the right rear rim. Check that the tyre beads are correctly bedded into their seating channels on the rim. Note the position of the S-shaped tread on the wheel (red arrow).



STAGE COMPLETE

Store the right rear wheel along with the Prancing Horse hub cap safely away with the others until they are needed for fitting.



STAGE 24 THE SEAT BELTS

DURING THIS STAGE, YOU WILL FIT THE SEAT BELTS. EVEN A TOP OF THE RANGE TWO-SEATER LIKE THE LAFERRARI WOULD BE INCOMPLETE WITHOUT SAFETY EQUIPMENT FOR THE DRIVER AND PASSENGER.


PARTS LIST

NO.	NAME	QUANTITY	MATERIAL
1	Rear window front bezel with seat belts	1	ABS + fabric
2	Rear window rear bezel	1	ABS
3	"Limited edition" plate	1	Printed
4	Screws type B	3	Metal




STEP 1

Start by press-fitting both rear window bezels together as shown.

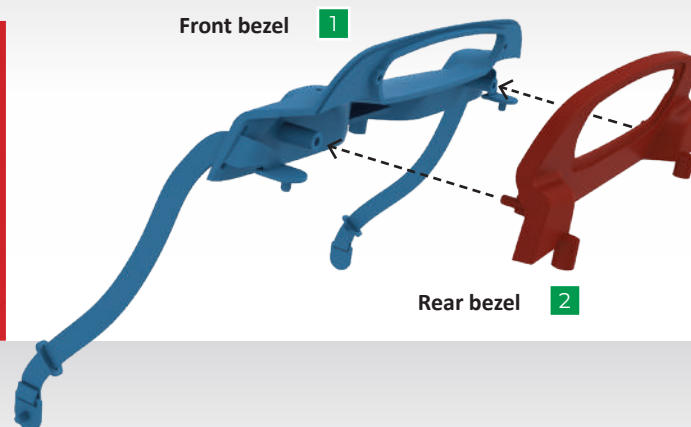

STEP 2

After joining the bezels, fit them onto the bottom section of the passenger compartment. Press the upper seat belt connectors into the bottom section of the passenger compartment at the same time.

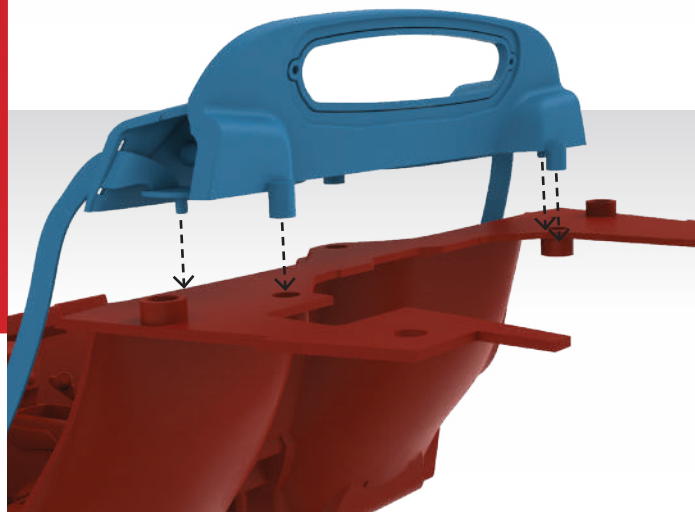


STEP 3

Use three type B screws (4) to secure the passenger compartment onto the bezels of the rear window.



STEP 4

Now secure the lower ends of both belts. The passenger compartment has holes at the top and bottom where you can insert the fixing pins of the seat belt connectors.

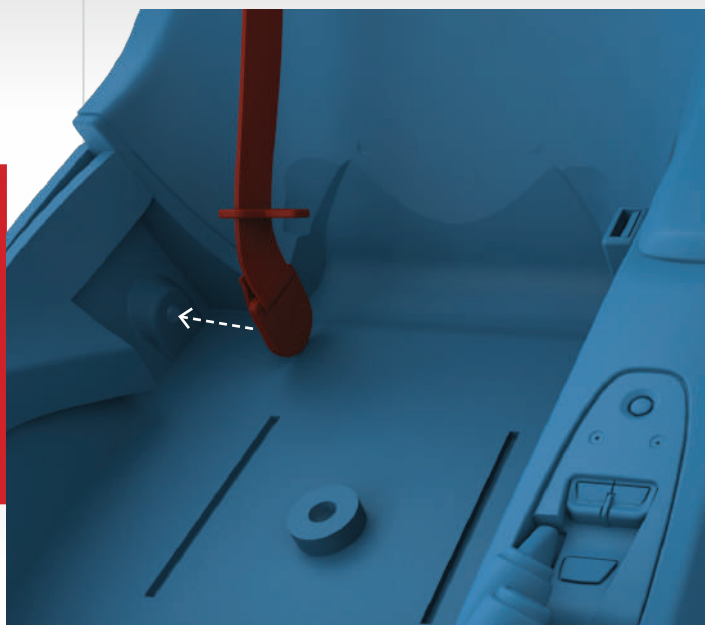

STAGE COMPLETE

The interior of your 1:8 scale LaFerrari is now complete with the rear window support frame and the seat belts. Carefully store the model and the “Limited edition” plate away.

